



Placement and Maintenance


ERAS cabinets are designed for indoor use on level floors. Clean glass with glass cleaner, and wood veneer with a moist cloth.

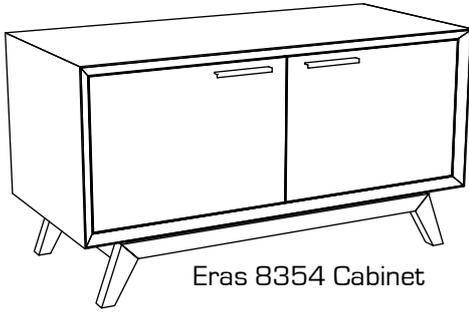

Eras 8354 Cabinet

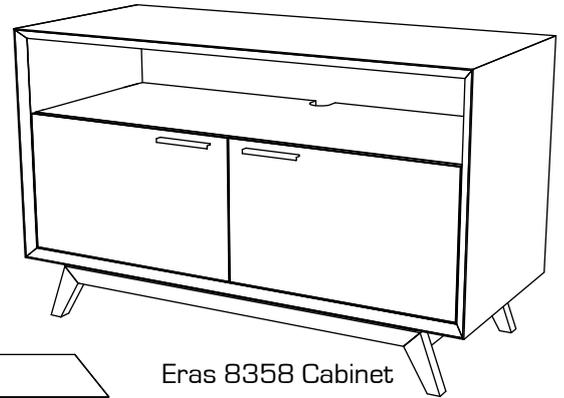


Eras 8358 Cabinet

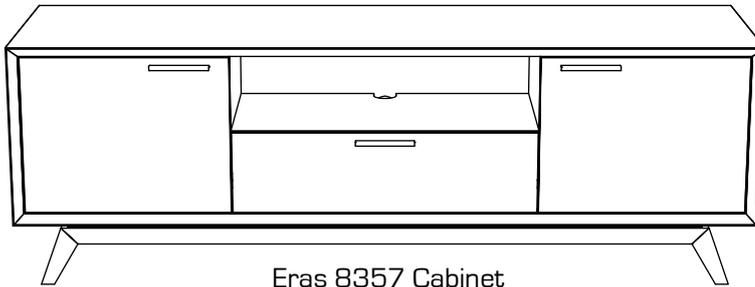


Eras 8357 Cabinet

Component List

ERAS cabinets are engineered for easy assembly. Carefully follow this procedure to prevent any damage. Unpack and identify the components. The assembly workspace should be a non-marring surface such as clean carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.

-  **A** - 4mm Hex Driver x 1
For Screws
-  **B** - 5mm Hex Wrench x 1
For Cam and Bolt
-  **C1** - Cam and **C2** - Cam Bolt x 4
-  **D** - 8 x 40mm Dowels x 4
-  **E** - 1/4-20 x 38mm Screws
8357, 8358 x 6
-  **F** - 1/4-20 x 16mm Screws
8357, 8358 x 4
-  **G** - 1/4-20 x 63mm Screws
8357, 8358 x 10
8354 x 8
-  **H** - M4 x 25mm Screws
8354, 8358 x 4
8357 x 6
-  **I** - Handles
8354, 8358 x 2
8357 x 3

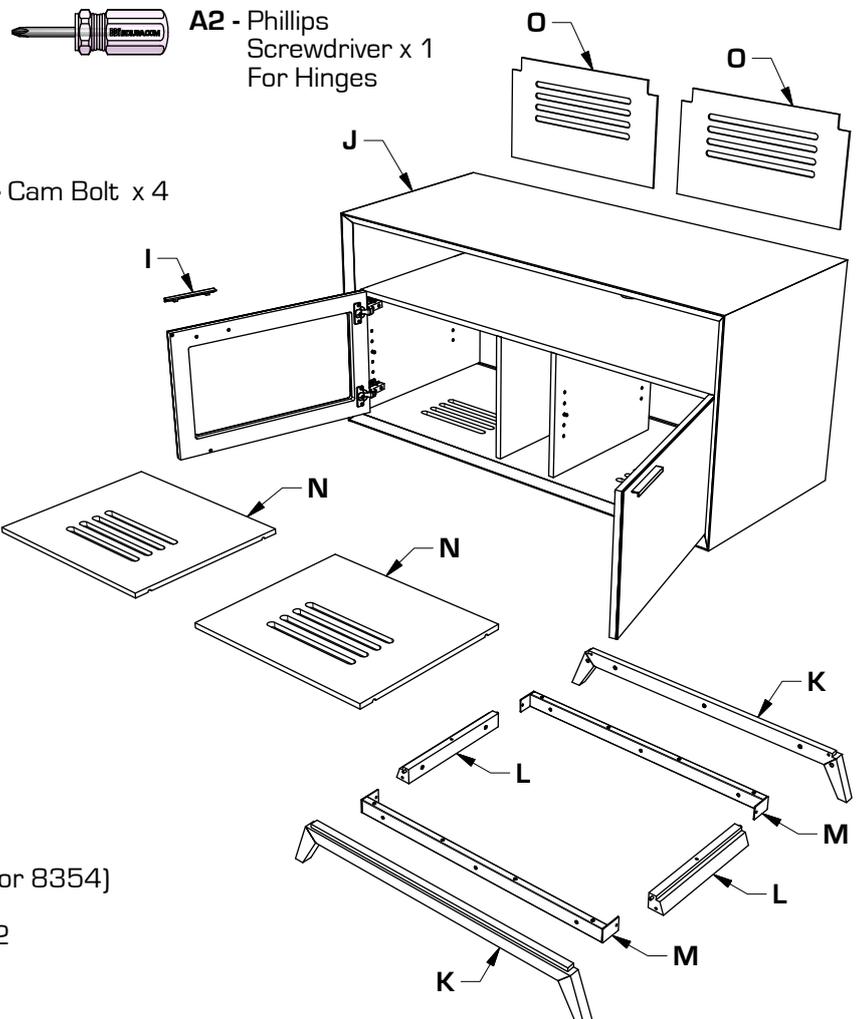


- J** - Cabinet x 1
- K** - Long Base Rails x 2
- L** - Short Base Rails x 2
- M** - Steel Supports x 2 (none for 8354)
- N** - Adjustable Shelves x 2
- O** - Removable Back Panels x 2

Step 1

Assemble Base


Insert short threads of **Cam Bolt (C2)** into inserts in **Long Base Rails (K)**. Turn **Cam Bolts (C2)** by hand **COUNTERCLOCKWISE** to tighten.
Insert **Dowels (D)** into **Long Base Rails (K)**.
Insert **Cams (C1)** into **Short Base Rails (L)** with arrow pointing toward **Long Base Rail (K)**.

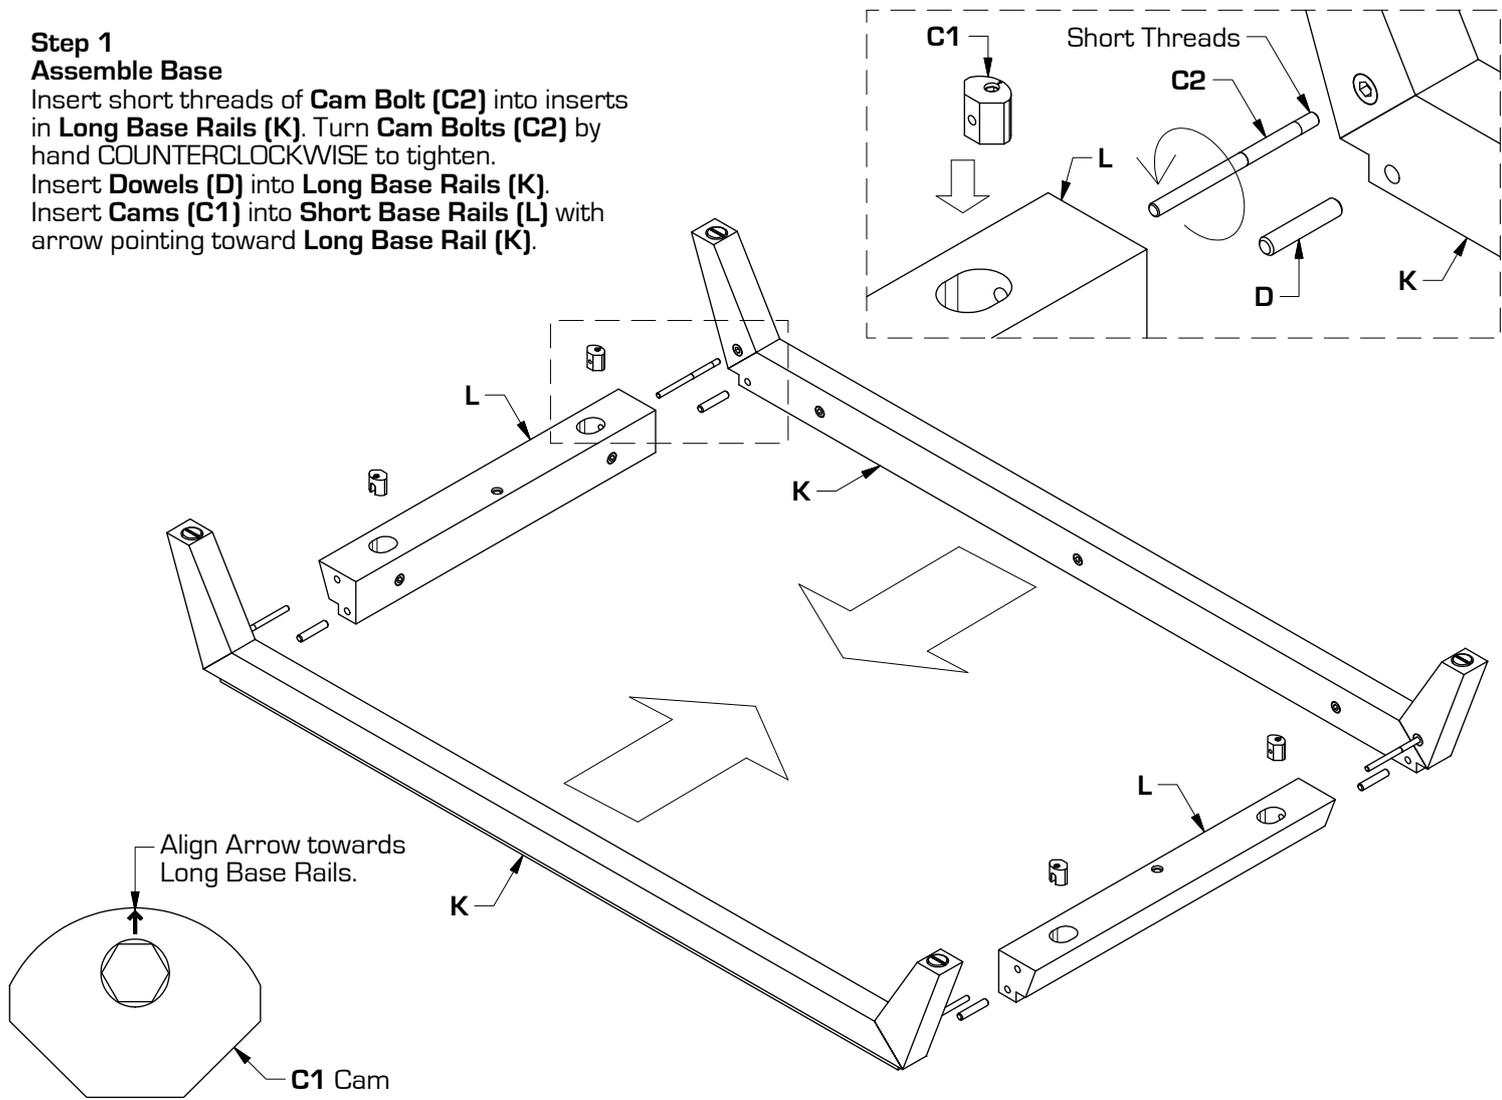

Step 2

Tighten Cams in Base



Tighten **Cams (C1)** in **Short Base Rails (L)** using **5mm Hex Wrench (B)**.

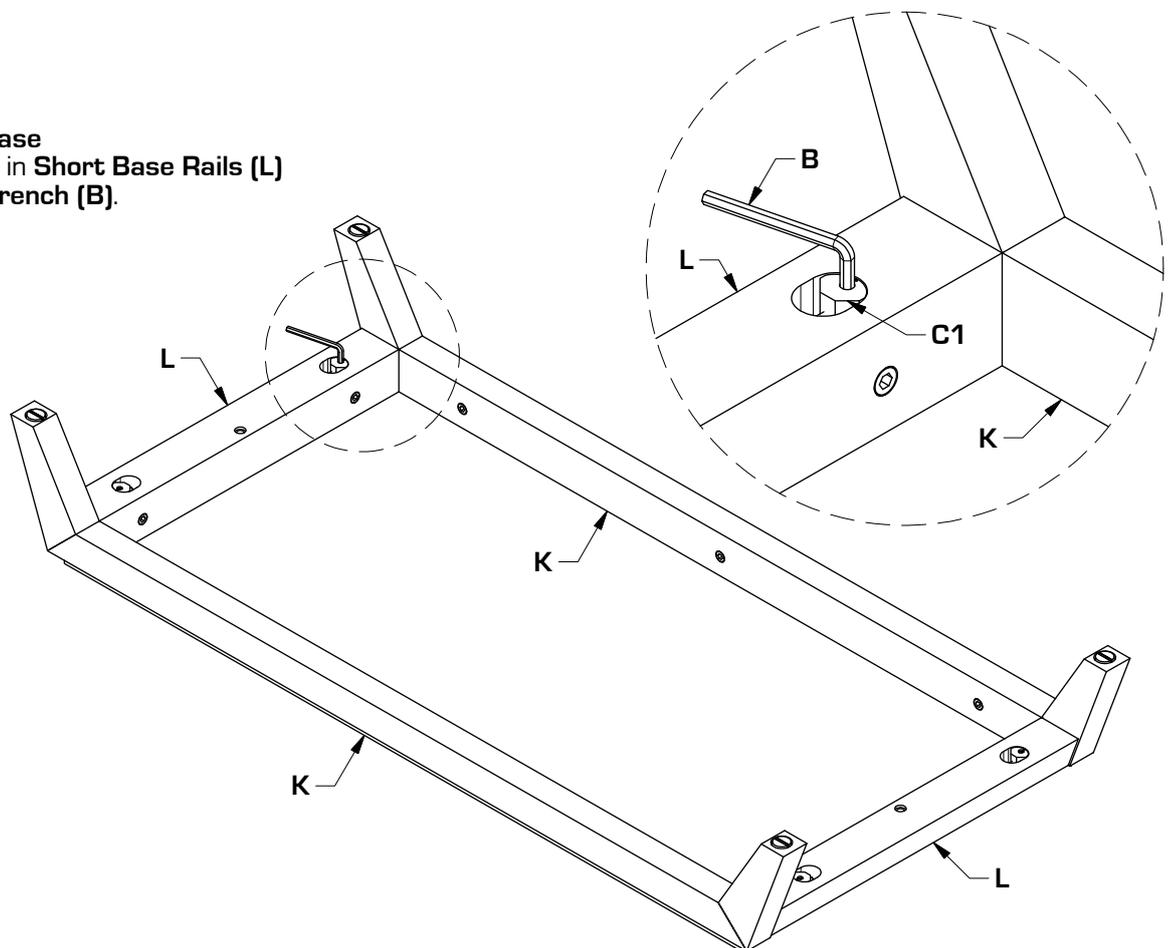

Step 3

Attach Base to Cabinet Bottom

Place assembled base onto cabinet bottom. Insert **Screws (G)** into **Short Base Rails (L)** and tighten using **4mm Hex Driver (A)**.


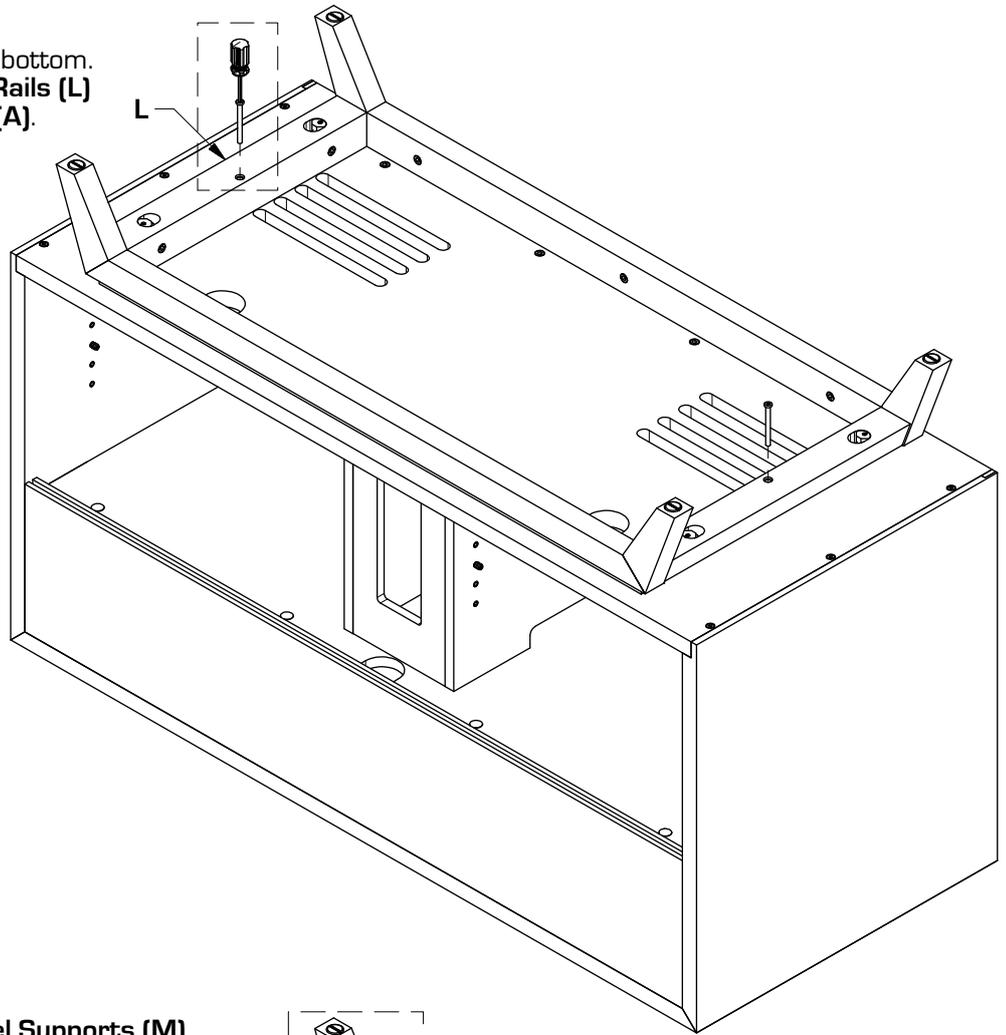
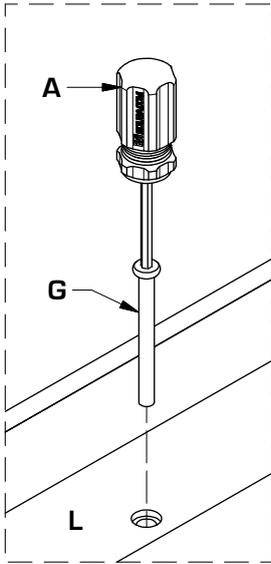


Step 4

Attach Steel Supports to Cabinet

Install **Screws (E, F and G)** into **Steel Supports (M)** and tighten using **4mm Hex Driver (A)**.

After all screws are tightened, turn cabinet over right side up.

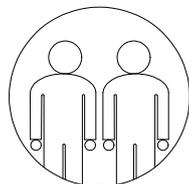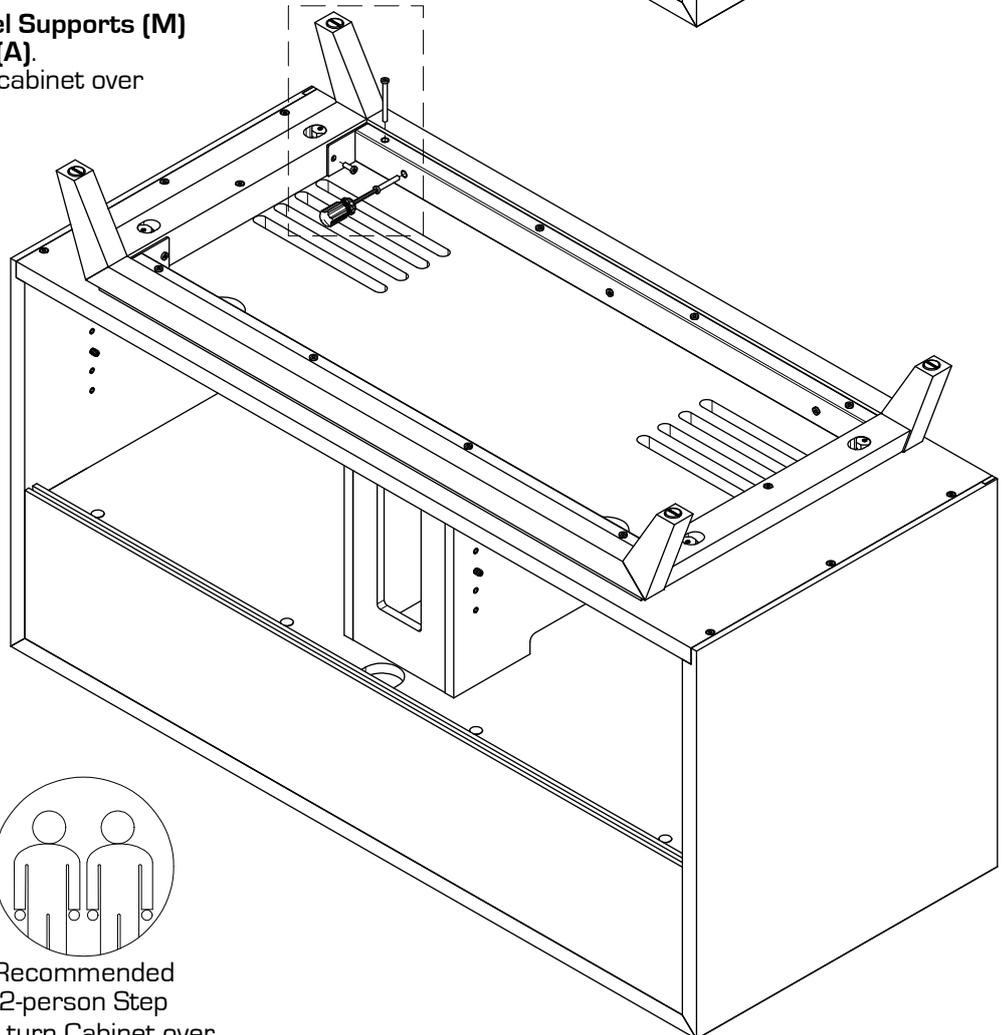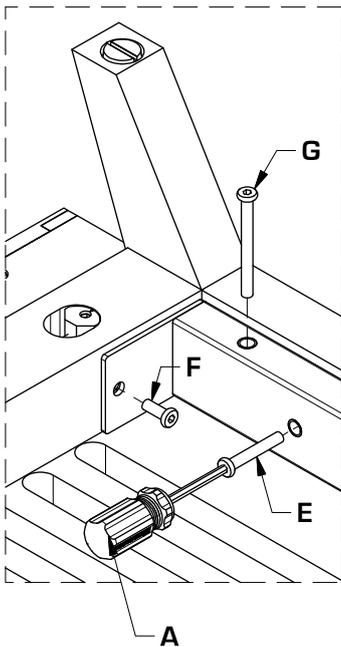


Recommended
2-person Step
To turn Cabinet over

Step 5

Attach Handles

Attach **Handles (I)** to Doors using **Screws (H)** and tighten with Phillips Screwdriver (not provided).

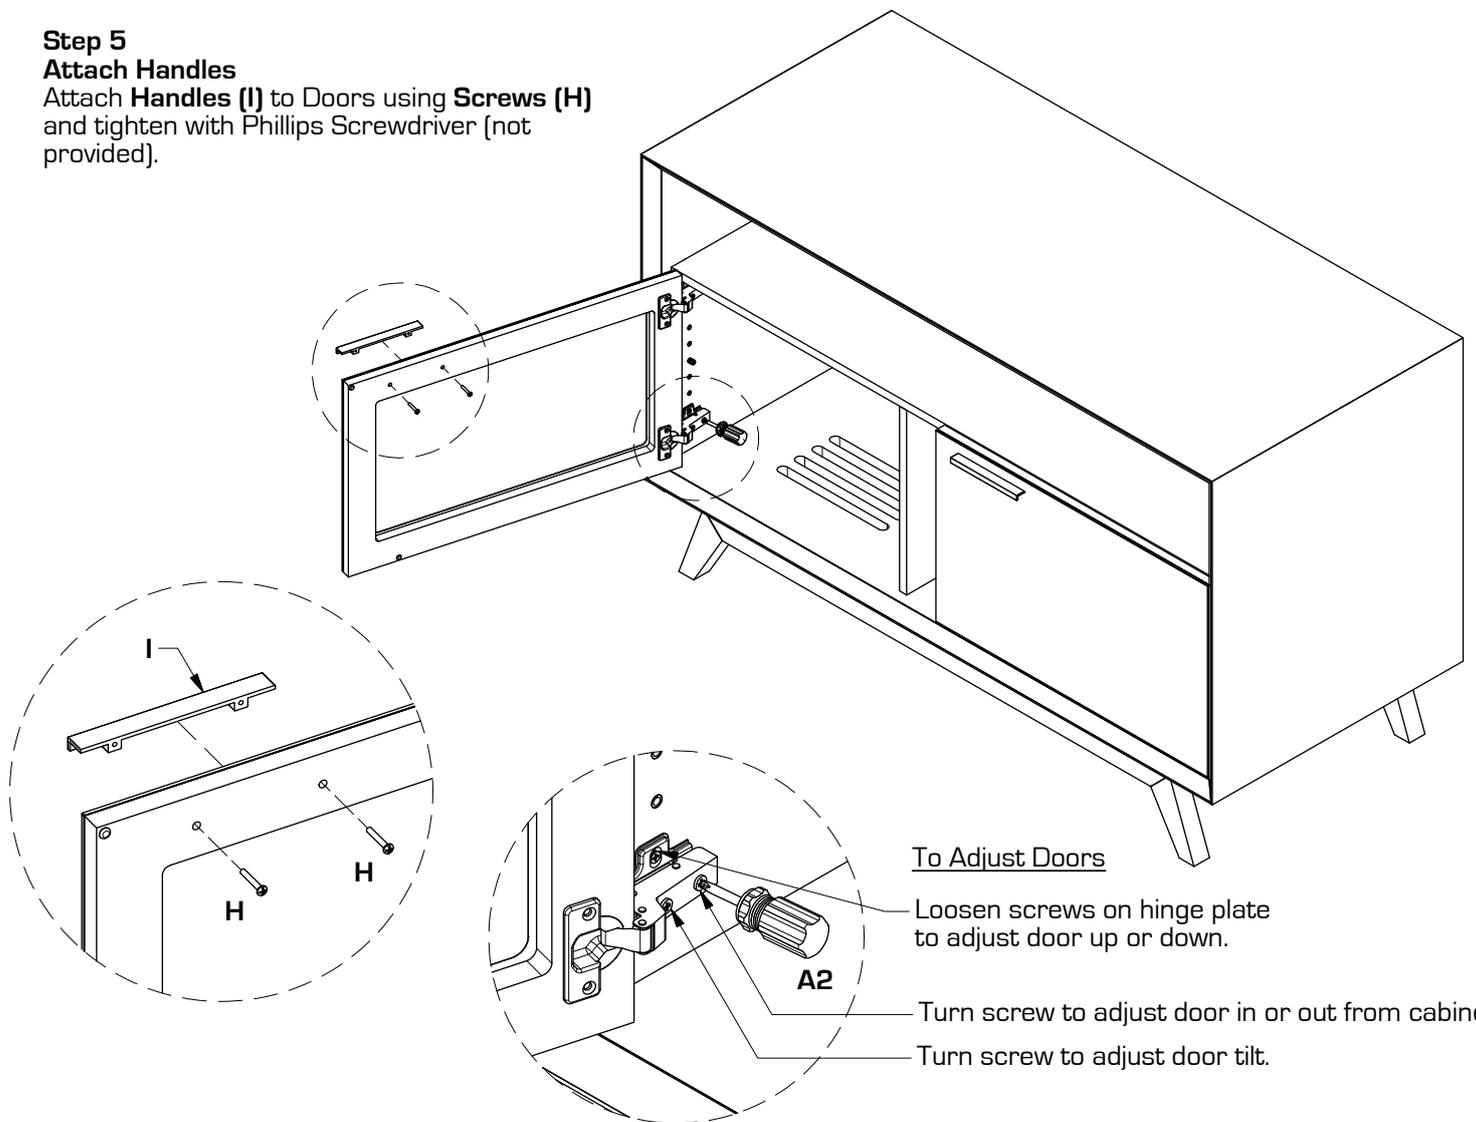

Step 6

Install Shelves and Back Panels

Install **Shelves (N)** at desired location using Shelf Pins.

Install **Back Panels (O)** by inserting top edge into upper slot, then tilt bottom of panel in and lower panel into bottom slot.

