
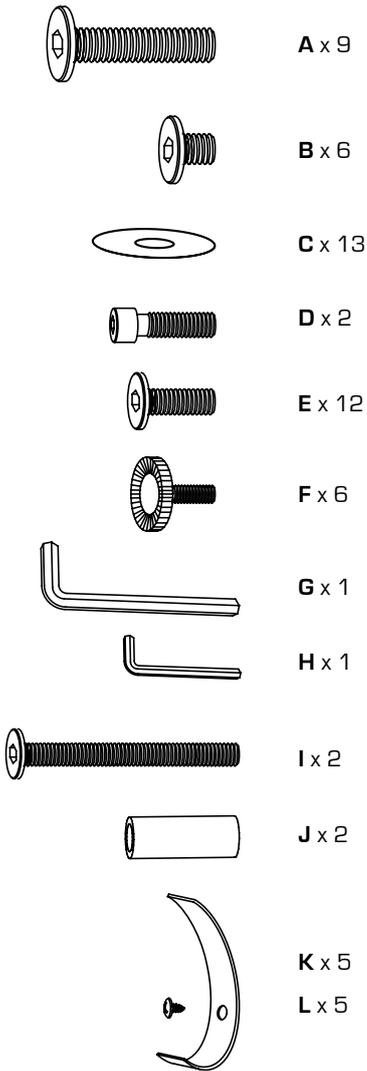


Component List

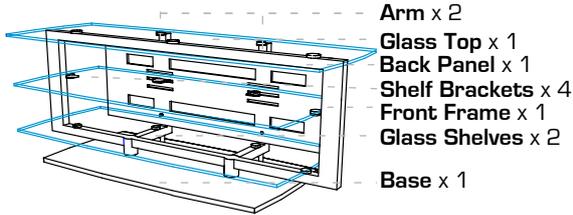

Your Icon[®] Home Theater Furniture is engineered for easy assembly. Carefully follow this procedure to prevent any damage.

Placement and Maintenance


Icon[®] Home Theater Furniture is designed for indoor use on level floors. Clean glass with glass cleaner, and steel parts and wood veneer with a moist cloth.

Step 1 Unpack and Identify

Unpack and identify the components at left. Note that some components are shipped inside the cabinet. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.

Step 2 Install Arms


Bracket mounting holes should face inward.

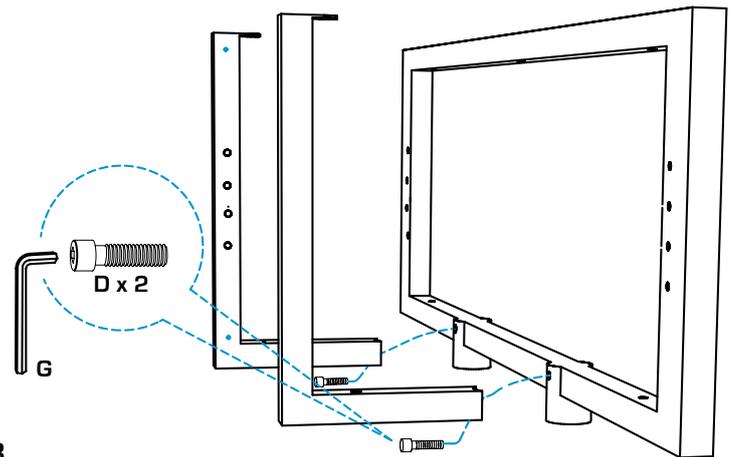

Step 3 Install Levelers and Frame to Base

Install **Levelers (F)** to bottom of **Base**. Adjust **Levelers (F)** so base is level and stable. Use shown hardware to attach **Base** to **Frame**.

DO NOT FULLY TIGHTEN "I" SCREWS, as leaving them loose will facilitate installation of **Glass Shelves** and **Glass Top**.

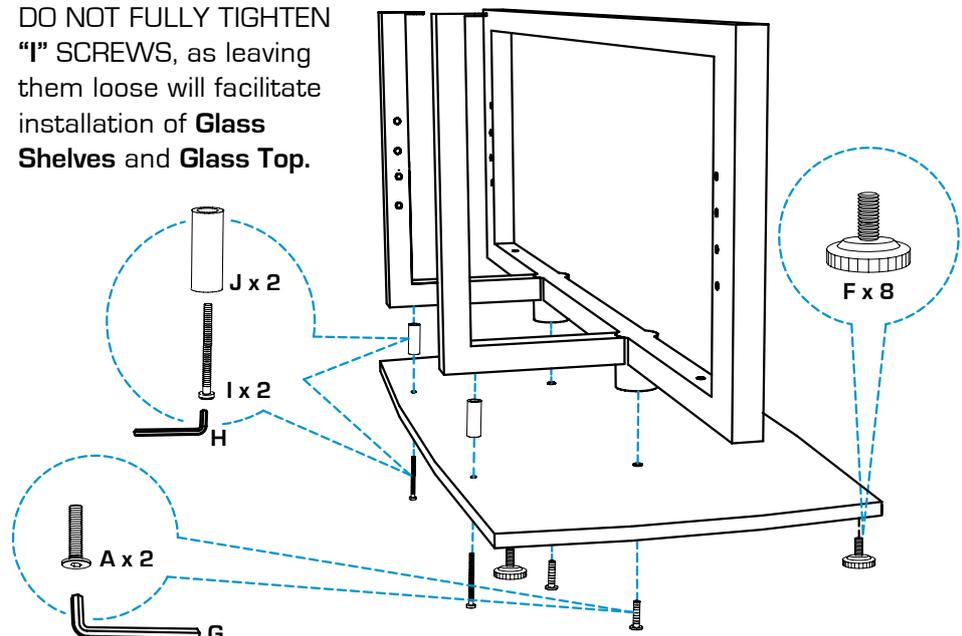


Note: Base is easiest to install if unit is rested on it's BACK.

Step 4

Install Back Panel and Wire Managements Straps

Back Panel is to be installed with small holes facing backward. DO NOT FULLY TIGHTEN "E" SCREWS, as leaving them loose will facilitate installation of **Glass Shelves** and **Glass Top**. BDI label should be on bottom left corner of **Back Panel**.

Velcro straps are supplied to control cables. They can be screwed into the steel at top and bottom of the arm or into the small holes on the **Back Panel**.

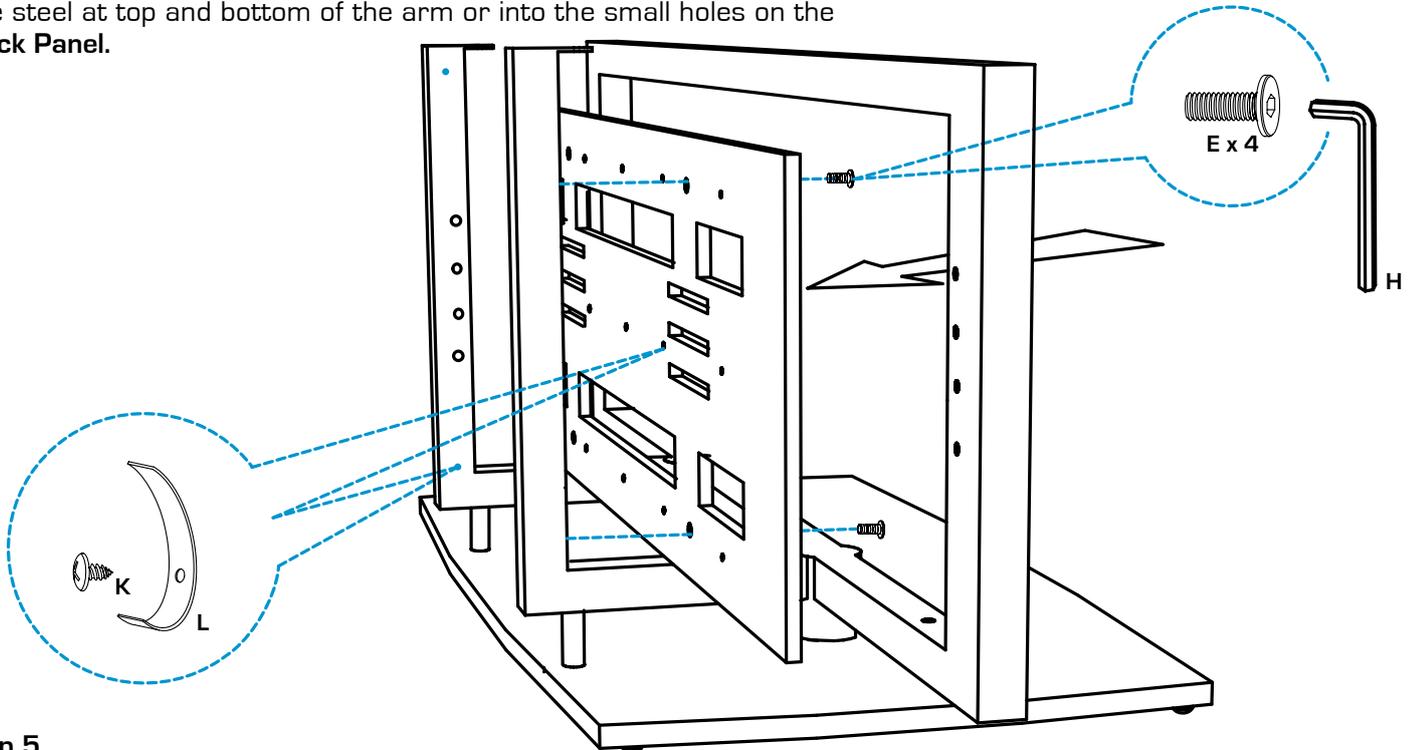


Step 5

Install the Shelf Brackets

Shelf Brackets can be adjusted to offer three different shelf positions.

Note: To reposition **Shelf Brackets**, it is not necessary to remove the **Back Panel**.

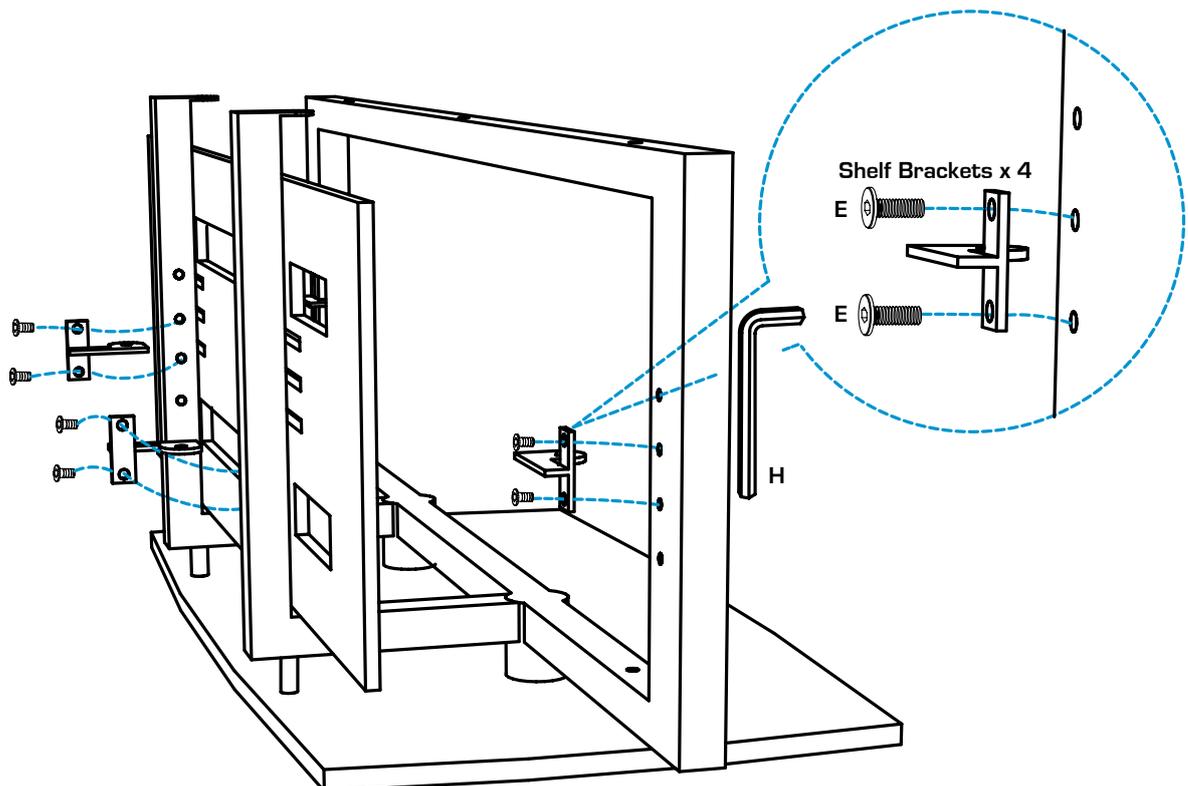



Step 5 Install Glass Shelves

Two person assembly is recommended for this step.

Use appropriate hardware. Apply **Felt Washers** to the stainless pucks prior to glass installation.

PLEASE READ: Leave glass screws loose until all screws have been installed. Then tighten securely. It may be necessary to loosen **Shelf Brackets** to obtain proper fit. Shifting the **Arms** and **Back Panel** as needed to obtain proper fit may also be necessary. Once **Glass Shelves** and **Top Glass** are fitted, PLEASE BE CERTAIN TO GO BACK AND TIGHTEN ALL SCREWS.

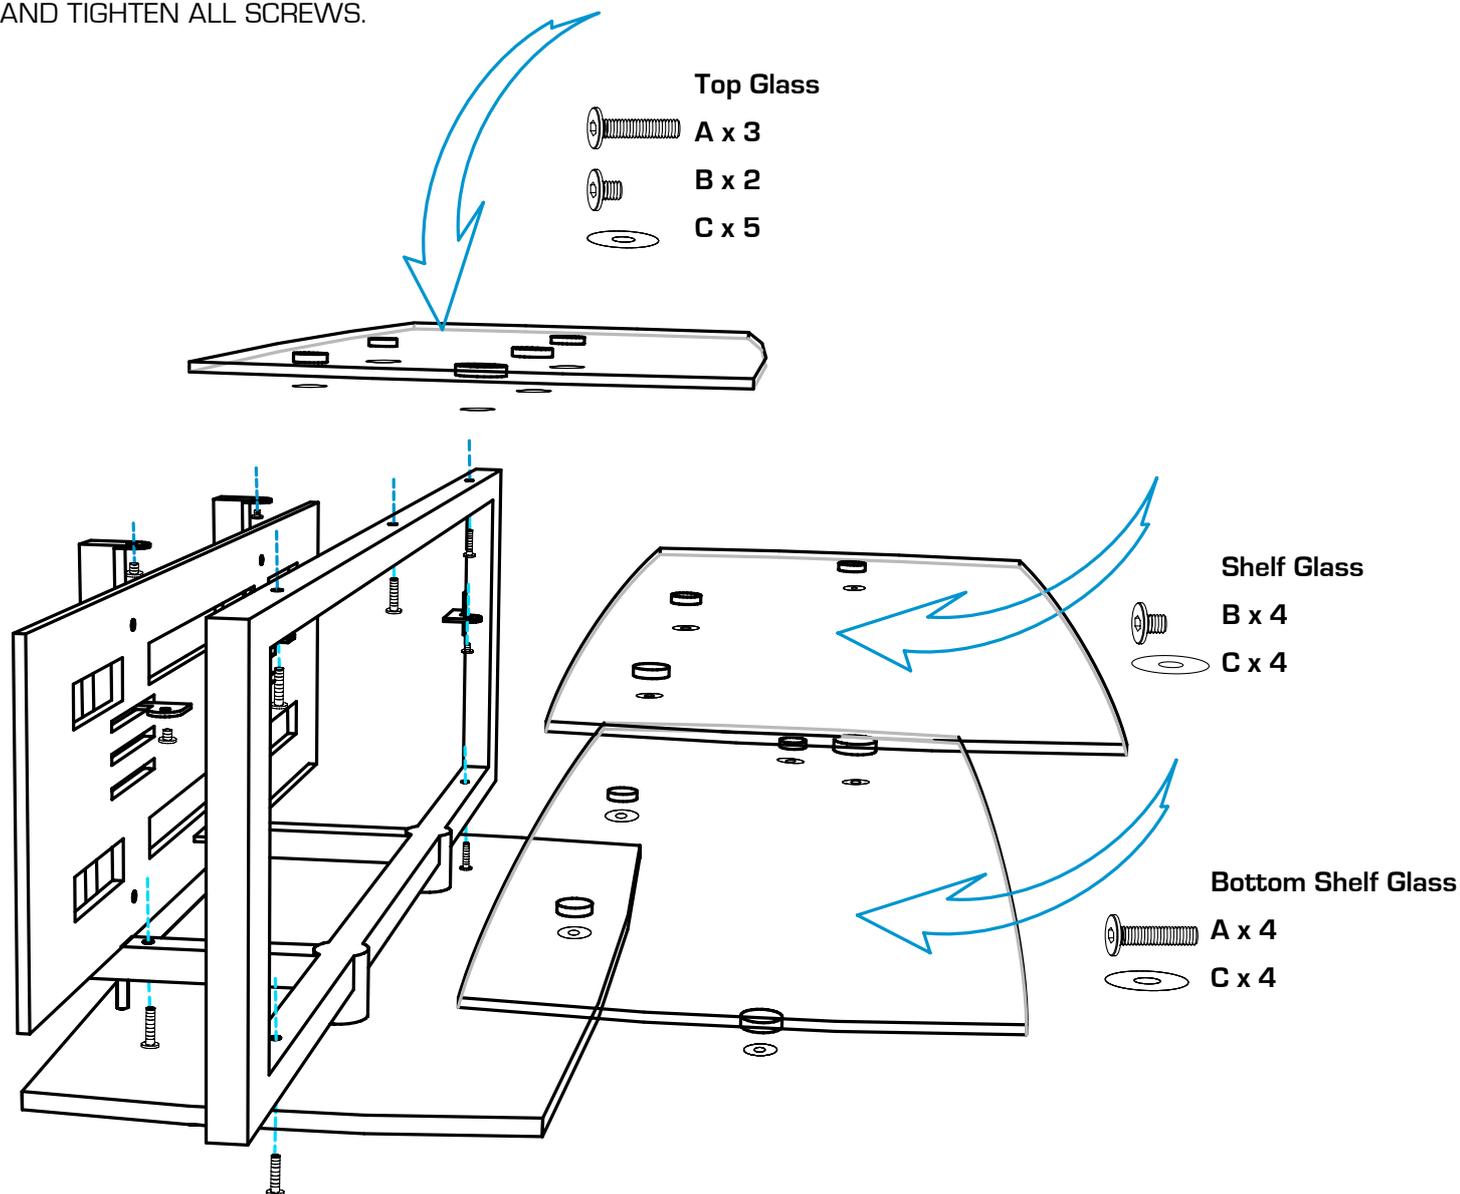





Icon Models 9424 & 9429 are engineered specifically for Flat Panel Plasma and LCD TVs. If a micro-display rear projection TV is used, the TV must be positioned as far back as possible while still being fully supported by the glass. **Minimum 3" (75 mm) from front edge of glass.** Consult BDI's website (www.bdiusa.com) or sales brochure for recommended TV sizes.

INCORRECT

Do not position a Flat Panel TV such that the screen on the front side of the steel frame.

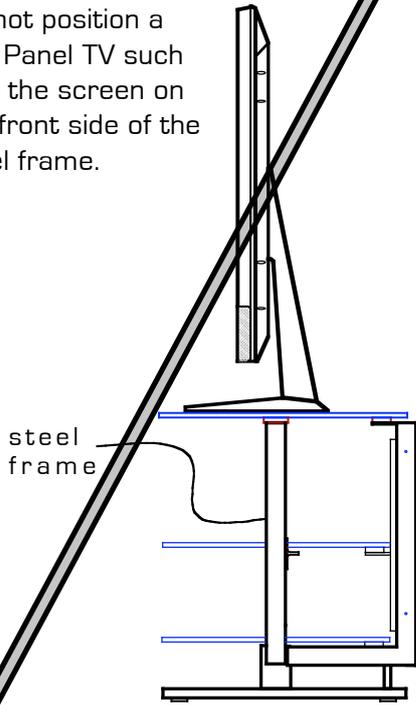


INCORRECT

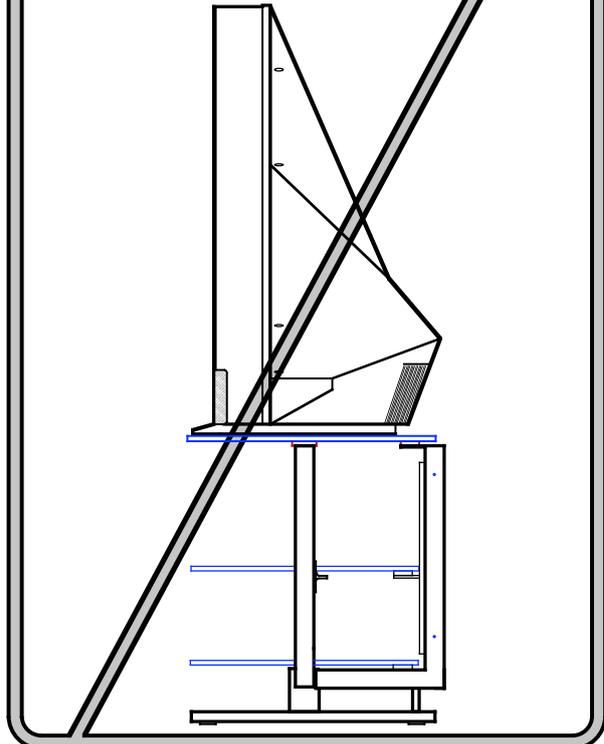


CORRECT

Position the Flat Panel TV so that the screen is positioned behind the steel frame.

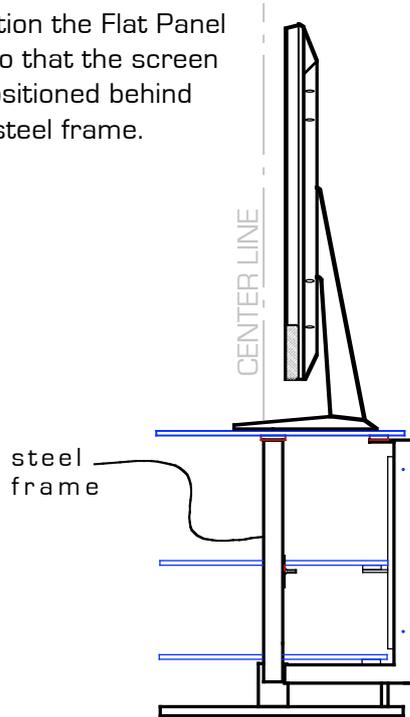

CORRECT

A Rear Projection TV must be positioned a minimum of 3" from front edge of glass while not hanging over the rear of the unit.

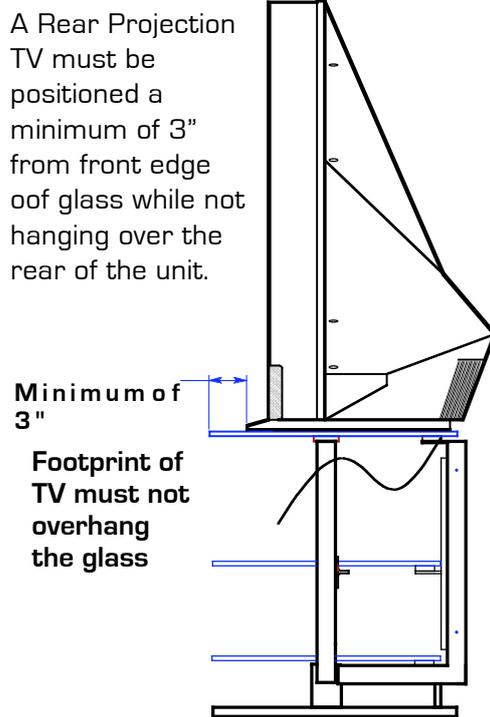

Minimum of 3"

Footprint of TV must not overhang the glass